



Fujitsu LifeBook N3510 Top Palm Rest Cover Replacement

Written By: Neil Daniels





TOOLS:

- [Magnetic Project Mat](#) (1)
 - [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Start by locating the two clips on the bottom of the computer that support the battery.

Step 2



- Use your fingers to push the clips inward and then upward.
- Lift the battery out of the computer.

Step 3 — Hinge Cover



- Use a spudger to lift the back of the hinge cover on the left and right sides of the computer.

Step 4



- Lay the computer flat on a stable surface with the monitor pointing away from you.


Step 5



- Use a spudger to partially lift the hinge cover.

Step 6



 The hinge cover has a ribbon cable that is attached to the motherboard. To prevent damage, lift the hinge cover slowly.


- Lift the hinge cover out of place enough to expose the ribbon cable.


Step 7



- Disconnect the ribbon cable from the motherboard and remove the hinge cover from the computer.

Step 8 — Keyboard

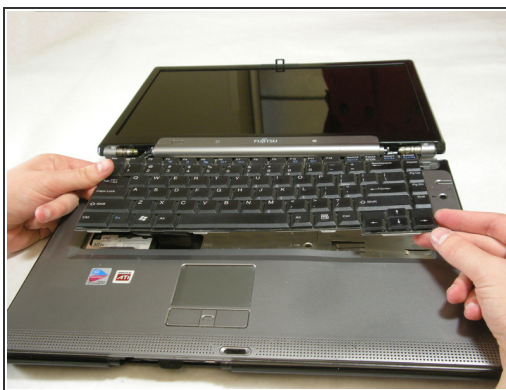

 The keyboard has a ribbon cable that is attached to the motherboard. To prevent damage, lift keyboard slowly.

- Lift the keyboard enough to expose the ribbon cable.

Step 9




- Use a spudger to release the ribbon cable from the motherboard.

Step 10




- Carefully remove the keyboard after the ribbon has been detached.

Step 11 — Metal Motherboard Cover

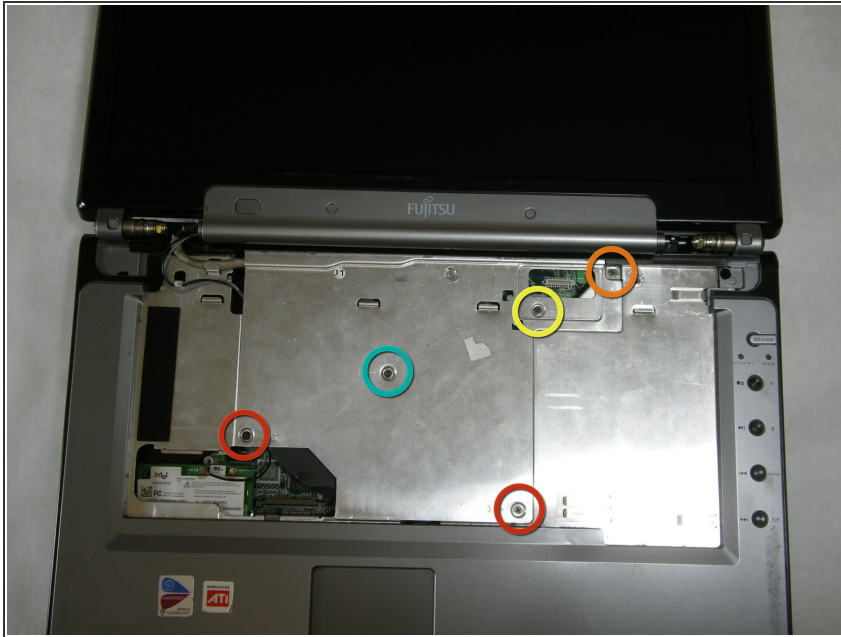

- Remove the following screws, all labeled "3."
 - Two 8.63mm screws.
 - One 7.65mm screw.
 - One 5.74mm screw.
- Remove the following screw, labeled "15."
 - One 17.81mm screw.

Step 12

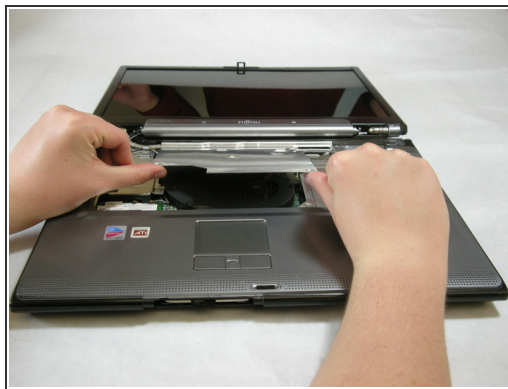

- Lift the cover with fingers and remove.

Step 13 — Display



- Remove labeled screws.

Step 14



- Remove the screws from the bottom of the hinge as shown in the image.

Step 15



- Use a spudger to detach and remove cables from the motherboard.

Step 16



- Unplug shown cables from the wireless module.

Step 17



- Position hands as shown and hold down the body of the computer. Proceed to lift the display up.

Step 18 — Top Palm Rest Cover



- Remove the 4 labeled screws.

Step 19



- Remove screws from bottom of laptop as shown in the picture.

Step 20



- Lift the palm rest cover from the base of the laptop.
- You may use spudger if needed, lift from the front corners as shown.

Step 21



- Great job! You have successfully removed the old palm rest cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 06:06:12 PM.